



Packing List

- Rear Fireback
- (2) Side Firebacks

NOTE The firebacks are 2-sided. When installing, use the desired pattern.

Installation

WARNING Turn off gas to the appliance and make sure it has fully cooled prior to conducting service.

- 1 Remove the glass frame and logs (see the manual for details).


IMPORTANT INSTALLATION NOTE FOR MODELS USING THE ACCENT LIGHT:

Follow the steps below if installing the firebacks with an accent light.

- a) Remove the burner (see the manual for details).
- b) Install the rear fireback (see the directions below).
- c) Install the accent light (see the directions included with the kit).
- d) Replace the burner.
- e) Install the side firebacks (see the directions on the following page).

- 2 Install the rear fireback following the directions below.

Hold the rear fireback face down, slide the top behind the baffle on top of the firebox, and pivot it back into place. It rests on the shelf at the back of the firebox.

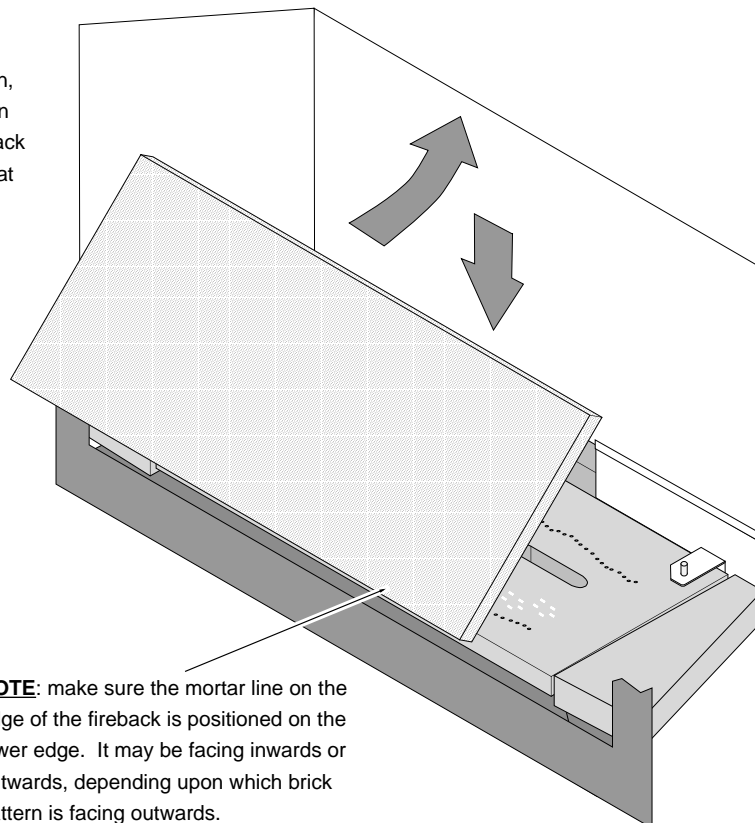

NOTE: make sure the mortar line on the edge of the fireback is positioned on the lower edge. It may be facing inwards or outwards, depending upon which brick pattern is facing outwards.



DVL Insert Firebacks 2-Sided (2005)

SKU # 96100150 - Brick or Herringbone

- 3 Install the side firebacks following the directions to the right.
- 4 Restore the fireplace to the correct configuration.

